User Guide



Big Digit Indoor/Outdoor Hygro-Thermometer

Model 445713



simultaneously displays indoor/outdoor temperature and RH

Eselectable temperature units °C/°F

IMIN/MAX memory and recall

For wall-mount or desktop use

Warranty

PJRS stems, Inc. warrants finis Extech instruments brand device folderect similar parts and workmanship for one warranty in parts and work warranty in the warranty in the warranty of work was and work was a compared to the warranty of warranty on the warranty of warranty of warranty of warranty on the warranty of warranty

Copyright © 2013 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in and form.

www.extech.com

Introduction

Congratulations on your purchase of Extech's Big Digit Indoor/Outdoor Hygro-Thermometer. This professional meter, with proper care, will provide years of safe reliable service.

Specifications

	Range	Accuracy
Temperature	-10 to 60°C 14 to 140°F	± 1.0°C within -10°C to 50°C ± 1.8°F within 14°F to 122°F
Humidity	10% to 99%	± 5% RH within 25% to 85% RH (@ 73°F/23°C)
Battery	1.5V 'AAA' cell	

Operation

- Open the battery compartment by pushing the cover on the rear of the instrument downward as indicated by the arrow. Remove the battery safety strip and the protective cover on the LCD display. The instrument is now ready for use.
- 2. The temperature units (°F/°C) are selected via the switch located on the rear of the instrument.
- The upper display indicates the indoor humidity and temperature.The lower display indicates outdoor, remote probe, humidity and temperature.
- 4. Displaying the minimum and maximum values.
 - a. Press the MAX/MIN button. The highest value measured since the Reset button was last pressed appears on the display.
 - b. Press the MAX/MIN button again to display the lowest value measured since the Reset button was last pressed.
 - c. Press the MAX/MIN button again to return to normal display operation.
- 5. Resetting (clearing) the MAX/MIN memory.
- a. Press and hold the RESET button for 1 second while in the MAX/MIN display mode to clear the memory and start recording new max/min values.
- The unit can be wall-mounted or placed on a flat surface using the fold-out footing.
- 7. The low battery flag will appear on the display when the battery voltage is low. Replace the battery when this occurs.

Maintenance

Battery Replacement

Open the battery compartment by sliding the battery cover on the rear of the instrument downward as indicated by the arrow. Replace the 1.5V 'AAA' battery and replace the cover.



Support line (603) 324-7800
Technical support: Extension 3; E-mail: support@extech.com
Repair & Returns: Extension 4; E-mail: repair@extech.com
Product specifications subject to change without notice
For the latest version of this User's Guide, Software updates, and other
up-to-the-minute product information, visit our website: www.extech.com